


**C2PIH**




凸头带灯按钮  
Convex head with lamp button

**C2PIM4**

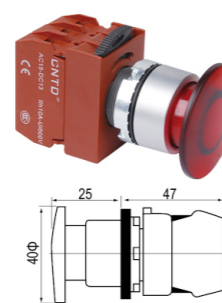

大头带灯按钮  
Big head with lamp button

**C2PID**

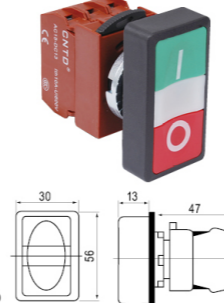

双位带灯按钮  
Double push button with lamp

**C2SIS**




短柄带灯旋钮  
Short shank with lamp knob

**C2SIL**




长柄带灯旋钮  
Long handle with lamp knob

**C2LIF**

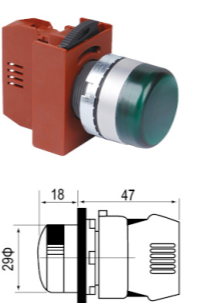

指示灯  
Indicating lamp

**C2LUF**

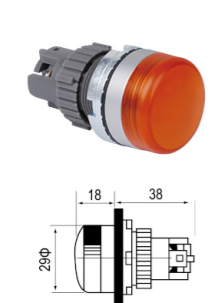

指示灯  
Indicating lamp

**C2MN-T2**



十字开关双向复位  
Monolever switch bidirectional reset

**C2MN-F2**



十字开关双向自锁  
Monolever switch bidirectional self-locking

**C2MN-T4**




十字开关四向复位  
Monolever switch four-directional reset

**C2MN-F4**



十字开关四向自锁  
Monolever switch four-bidirectional self-locking

**C3SNS**

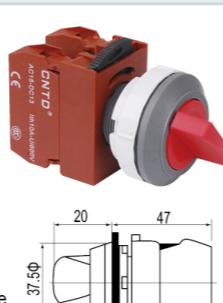

短柄旋钮  
Short handle knob

**C3SNL**




长柄旋钮  
Long handle knob

**C3SNK**



钥匙旋钮  
Key knob

**C3PNF**

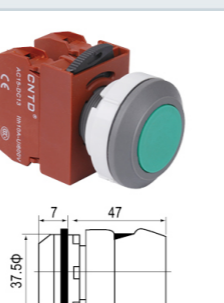


平头按钮  
Flat button

**C3PNH**




凸头按钮  
Convex head button

**C3PNM3**

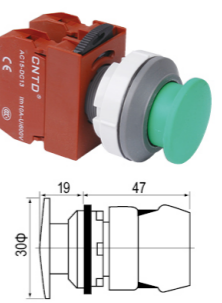


大头按钮  
Big button

**C3PNM4**

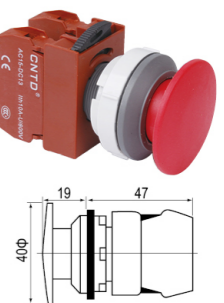


大头按钮  
Big button

**C3PNM6**

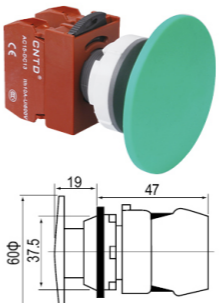


大头按钮  
Big button

**C3PNR3**

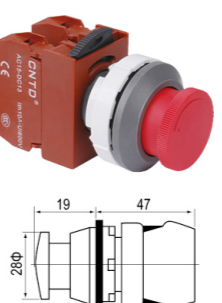

急停按钮  
Emergency stop button

**C3PNR4**

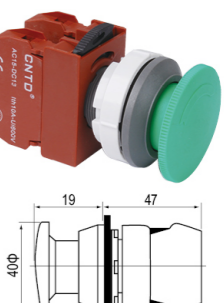

急停按钮  
Emergency stop button

**C3PNR6**



急停按钮  
Emergency stop button

**C3PNKM4**




急停钥匙旋钮  
Emergency stop key knob

**C3PIF**




平头带灯按钮  
Flat ribbon lamp button

**C3PIH**

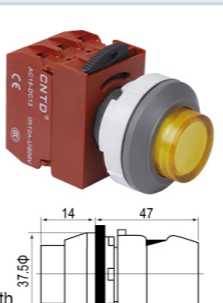


凸头带灯按钮  
Convex head with lamp button

**C3PIM4**

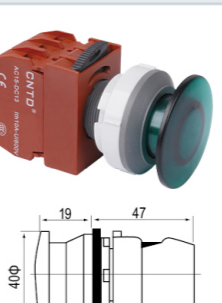

大头带灯按钮  
Big head with lamp button

**C3SIS**

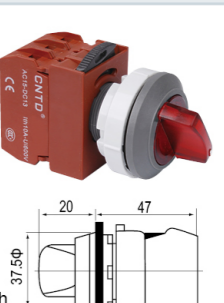


短柄带灯旋钮  
Short shank with lamp knob

**C3SIL**




长柄带灯旋钮  
Long handle with lamp knob

**C3LIF**

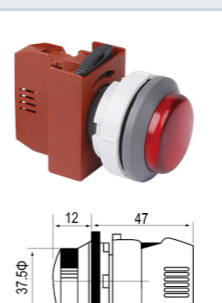

指示灯  
Indicating lamp

**C3LUF**

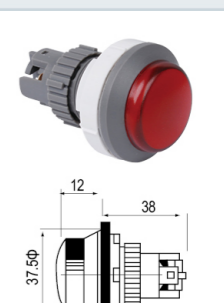

指示灯  
Indicating lamp